

7

QUICK START GUIDE

NTP RECEIVER



- 1** Connect your Ethernet Cable into the NTP Box marked (LAN)
- 2** With the supplied (LAN) cable, plug one end into NTP receiver Box marked (TRANSMITTER)
- 3** Plug the other end into the back of the Transmitters GPS/NTP Socket
- 4** When you Connect the receiver Box and Transmitter, the (POWER) light should be on, (RED) after 5-10 seconds the (STATUS) light should **blink (GREEN)**
- 5** You should get two (GREEN) lights on the Transmitter front.
The Transmitter should adjust to the Correct Time